

- 4. Use this appliance only for its intended use,
- 3. This appliance should not be used by, on or near children or individuals with certain disabilities.
- 2. Do not pull, twist, or wrap line cord around appliance.
- 1. **This appliance should never be left unattended when plugged in.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons: your appliance near the straightening plates, as it is hot when in use.

- 15. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.
- 16. Do not use with voltage converter.

- 14. Do not touch hot surfaces of the appliance. Use handles or knobs.
- 13. Do not use an extension cord with this appliance.
- 12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- 11. **Do not place the heated unit directly on any surface while it is hot or plugged in.**
- 10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
- 9. Do not use outdoors or in wet areas.
- 8. Never use while sleeping.
- 7. Never use while sleeping.
- 6. Keep the cord away from heated surfaces.
- 5. **Never operate this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.**

CAUTION: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

WARNING: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

CAUTION: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

CAUTION: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

CAUTION: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

CAUTION: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

CAUTION: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

CAUTION: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

CAUTION: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

CAUTION: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

CAUTION: Do not use this appliance if it has a damaged cord or if it has been dropped or damaged, or if it is not in good working condition.

ALJUSTES DE TEMPERATURA	TIPO DE CABELLO
Bajo 1-8	Cabello delicado, fino o delc
Medio 9-14	Cabello normal, a grueso o tratado
Medio-Alto 15-20	Cabello grueso u ondulado
Alto/Max 21-25	Cabello resistente
Máximo 26-30	Cabello muy resistente

Guía de temperatura

Este aparato está dotado de una potente resistencia de cerámica que logra un calentamiento muy rápido y mantiene la temperatura constante durante el uso. Esto permite que alcance la temperatura seleccionada muy rápidamente.

Cuenta con 30 opciones de temperatura, para permitirle escoger la temperatura perfecta para su tipo de cabello, desde el más fino

SAVE THESE INSTRUCTIONS

flat iron has been turned on.

WARNING: The flat iron's tourmaline ceramic-coated plates will get very hot within a few seconds and should not come into contact with the skin after the

shut itself off automatically within 60 minutes.

However, should you fail to turn the unit off it will never leave your flat iron at and unattended.

To turn off, press Off button (lights will go off).

Indicator light will then become steady.

ting until selected temperature is reached.

light will blink for each temperature set-

desired temperature setting; the indicator

an electrical outlet. Turn on unit. Select

before using the flat iron. Plug the iron into

Hair should be clean and completely dried

TO STRAIGHTEN HAIR

this safety feature.

a qualified electrician. Do not attempt to defeat

reverse the plug. If it still does not fit, contact

way. If the plug does not fit fully in the outlet,

This plug will fit in a polarized outlet only one

is wider than the other). As a safety feature,

This appliance has a polarized plug (one blade

designed to be operated at 120 or 120V AC.

on Alternating Current (60 hertz) only. This unit is

This flat iron is intended for use only with

ing styles and iron types. If you have fine

versatility for all hair types. If you have fine

ability and more professional results.

Your new flat iron features tourmaline ceramic

OPERATING INSTRUCTIONS

INSTANT HEAT TECHNOLOGY

desired temperature setting.

temperature setting.

You can vary the iron's temperature according

straighten hair, keep the heat setting on high.

results. If you have thick, wavy or hard-to-

hair, a low temperature will provide the best

ability and more professional results.

plates for smoother glide, maximum manage-

Your new flat iron features tourmaline ceramic

Some experience is necessary when learn-
ing to use this flat iron. After using the iron
several times, you will learn the ideal way to
straighten and style your hair.

the texture of your hair.

repeat process on certain areas, depending on

style you desire. It may be necessary to

sections of hair until you achieve the hair

to slide out. Repeat process on additional

the pressure on the handle and allow the hair

section toward the end. At the end, release

slowly pull the unit down along the hair

together. While maintaining the tension,

the plates by firmly squeezing the handles

plates, close to the scalp. Trap hair between

place the hair section between the two hot

more than 1/2 inch thick. Open the iron and

section that is 1 1/2 inches wide and no

before blow-drying hair. Start with a hair

For best results, use a light styling product

temperature setting.

temperature setting.

straighten hair, keep the heat setting on high.

results. If you have thick, wavy or hard-to-

hair, a low temperature will provide the best

ability and more professional results.

plates for smoother glide, maximum manage-

Your new flat iron features tourmaline ceramic

13. No utilice una extensión con este aparato.
14. No toque las partes calientes de este aparato. Utilice el mango y los botones o perillas.
15. El cuerpo del aparato cerca de las placas se vuelve muy caliente durante el uso. No lo toque.
16. No utilice este aparato con un convertidor de voltaje.

ADVERTENCIA: Las placas se volverán extremadamente calientes en segundos. Evite todo contacto con la piel después de encender el aparato.

CALENTAMIENTO INSTANTÁNEO

13. No utilice una extensión con este aparato.
14. No toque las partes calientes de este aparato. Utilice el mango y los botones o perillas.
15. El cuerpo del aparato cerca de las placas se vuelve muy caliente durante el uso. No lo toque.
16. No utilice este aparato con un convertidor de voltaje.

se vuelve muy caliente durante el uso. No lo toque.

16. No utilice este aparato con un convertidor de voltaje.

GUARDE ESTAS INSTRUCCIONES DE OPERACIÓN

Para uso doméstico solamente. Úselo sola-

mente con Corriente Alterna de 120V(60 Hz).

El cable de este aparato está dotado de una

clavija polarizada (una pata es más ancha

que otra). Como medida de seguridad, se

podrá enchufar de una sola manera en la

toma de corriente polarizada. Si no entrara

en la toma de corriente, invértela. Si aún no

entra completamente, comuníquese con un

electricista. No intente ir en contra de esta

función de seguridad.

FUNDAMENTOS DEL ALISADO

El cabello debe estar limpio y seco. Enchufe el cable en una toma de corriente. Encienda el aparato. Fije la temperatura al nivel deseado. Los indicadores luminosos par-

padearán hasta que el aparato alcance la temperatura deseada. Entonces, dejarán de

parpadear y permanecerán encendidos.

quickly to the temperature you've selected for your hair type.

This styling iron features a powerful ceramic heater that maintains high temperatures during use for precision styling. It heats up quickly to the temperature you've selected

USING INSTANT HEAT, THE 30 ULTRA-HIGH HEAT TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This styling iron features a powerful ceramic heater that maintains high temperatures during use for precision styling. It heats up quickly to the temperature you've selected for your hair type.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish.

Hair also glides right through the plates after it's straightened.

also helps smooth down flyaways and friz-

ies.

MEDIDAS DE SEGURIDAD IMPORTANTES

 
Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de muerte o herida por descarga:

1. **Siempre desconecte el aparato inmediatamente después de usarlo.**
2. No lo use en el baño o la ducha.
3. No coloque ni guarde este producto donde pueda caer o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato cayera al agua, desconéctelo inmediatamente. **No toque el agua.**

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

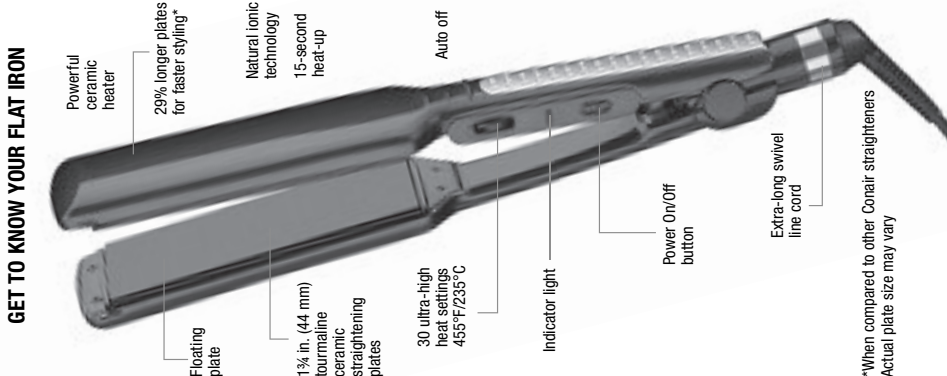

*When compared to other Conair straighteners
Actual plate size may vary

GET TO FLAT IRON

INFINITI PRO CONAIR
plancha alisadora con placas de
cerámica/turmalina de 44 mm



Instrucciones
Para su seguridad y para
distribuir plenamente
de este producto, siempre
lea las instrucciones
cuidadosamente antes de
usarlo.

 
Modelo CS179

¡GRATIS!

Botella del tratamiento
con aceite de argán
One 'n Only® Argan Oil (7 ml)

**ALWAYS UNPLUG
SMALL APPLIANCES**

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.



KEEP AWAY FROM WATER

**WARNING:
IF YOU THINK THE SWITCH IS OFF,
THE POWER IS NOT OFF,
YOU'RE WRONG.**

**USER
MAINTENANCE**

Your flat iron is virtually maintenance free. No oil, no wax, no special cleaning is needed. Keep all vents and openings clear of dirt and dust. If the unit, after cleaning, does not operate properly, it may be necessary to have it repaired by an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your iron is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. **Do not jerk or strain cord at plug connections.** Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**PRUEBE OTROS PRODUCTOS
INFINITI PRO BY CONAIR®**



LIMITED FIVE-YEAR WARRANTY
Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

 
ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**ADVERTENCIA:
SI CREE QUE NO HAY
CORRIENTE CUANDO
EL APARATO ESTÁ
APAGADO, ESTÁ
EQUIVOCADO**



**MANTÉNGALO ALEJADO
DEL AGUA**

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchúfe los aparatos eléctricos después de usarlos.

**SIEMPRE DESENCHUFE
LOS APARATOS PEQUEÑOS**

**TRY OUR OTHER INFINITI PRO
BY CONAIR® PRODUCTS**



**One 'n Only®
Argan Oil Treatment**

Ingredients (INCI): Dimethicone, Cyclopentasiloxane, Dimethiconol, C12-15 Alkyl Benzoate, Fragrance (Parfum), Argania Spinosa Kernel Oil, Yellow 11 (CI 47000), Red 17 (CI 26100).

Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Please register this product at:
www.conair.com/registration

 
For information on any Conair or Infiniti by Conair product, call 1-800-3-CONAIR or visit us on the web at: www.conair.com/infiniti

©2014 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

14PA004399

IB-12824

FAMILIARÍCESE CON SU PLANCHA

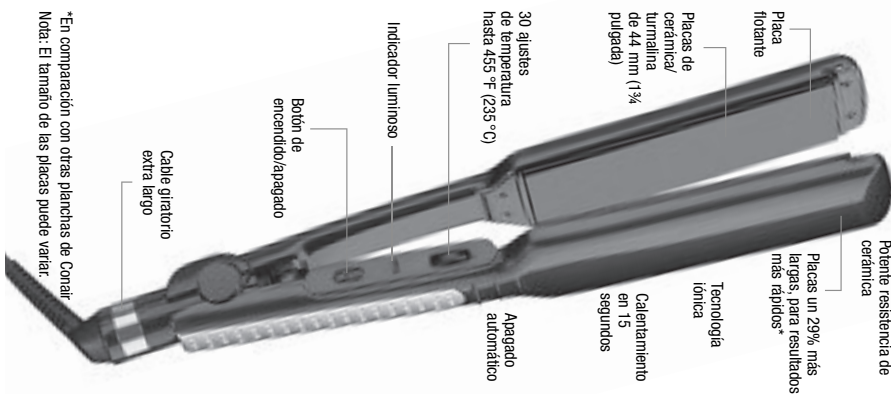

*En comparación con otras planchas de Conair.
Nota: El tamaño de las placas puede variar.

**INSTRUCCIONES DE
MANTENIMIENTO**

Su aparato requiere poco mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, permítale que enfríe y limpie la superficie exterior con un paño humedecido. En caso de mal funcionamiento, desconecte el aparato, permítale que enfríe y regrese a un centro de servicio autorizado. No trate de repararlo.

PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato. Esto podría dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no esté dañado. Deje de usar el aparato inmediatamente si el cable parece dañado o si el aparato dejara de funcionar o funcionara de manera intermitente.

ALMACENAJE

Cuando no lo utiliza, su aparato es fácil de almacenar. Permítale que enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. **No tire ni retuerza el cable al nivel del enchufe.** No enrolle el cable alrededor del aparato. Permítale que el cable cuelgue o que la junta que lo conecta al aparato esté suelta y recta.